

Accompanying Instructions for Mounting Shadow retractable roll screen on Inswing Door, inner frame mount. (Figure B)

Tools:
□ Tape measure
□ hack saw
□ dríll
□ #5 and #6 Robertson screwdrívers and bíts
□ 1/8", 7/64", and 11/64" drílls

The sill height adapter, housing, and tracks must all lie on the same plane. Use one of the tracks as a straight edge to achieve proper alignment of the sill height adapter.

Maintain the position of the sill height adapter while drilling 1/8" pilot holes (on the mounting groove) through the adapter and sill. Enlarge the hole in the adapter with a 11/64" drill before attaching it with the (2) 1 1/2" screws provided.

Before inserting tracks onto handle/housing, be sure the appropriate 3/8" screw has been removed from the end cap, this ensures the track guide can be seated properly within the track: when assembly is complete, open the unit halfway a few times to test for proper function.

When mounting the assembled unit, locate by feel the 1/8" drill on the mounting groove inside the track Drilling for the pilot hole and fastening the mounting screw should be done together before progressing to the next number in the order. The tracks take (6) 5/8" flat head screws.

The handle and magnet utilize 3/8" screws, while the striker plate uses 5/8" screws. When the magnet is attached, place the striker plate on it and close the door to locate its position on the framing.