





Re-tensioning retractable Screen Instructions

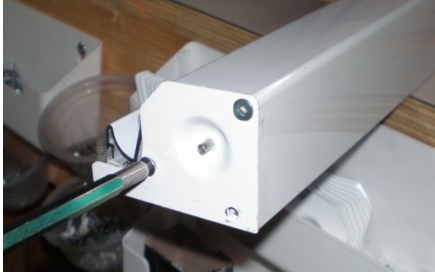

Loosen off round
pin housing end cap

Remove screws from
square pin housing end
so cap is free to rotate

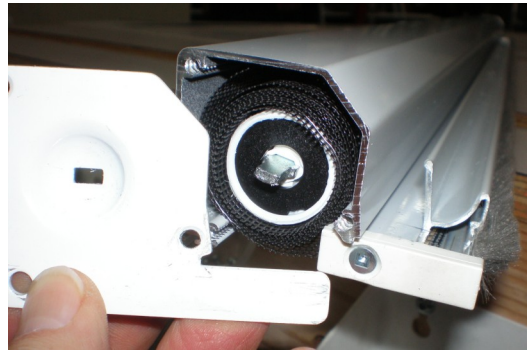

Insert square pin into mounting hole of
housing end cap, rotate cap clockwise wind
up spring. Add 15—18 turns. KEEP a good
gripe so spring won't release. *Gloves are
recommended.*



Re-attach end cap and tighten screws for both end caps.