






Installation instructions

Inswing Door
Inner frame mount
Figure B

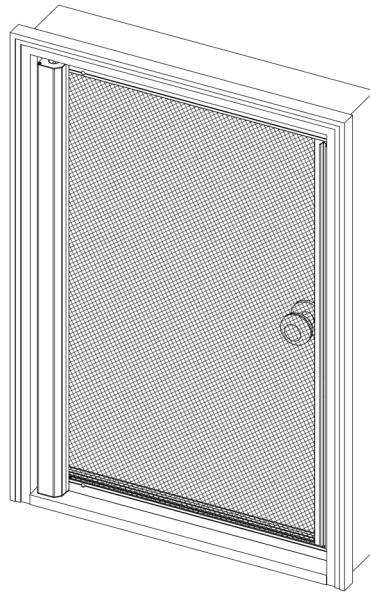


Hardware	
sill adapter:	(2) 1 1/2" screws
2 tracks:	(6) 5/8" screws
handle:	(3) 3/8" screws
striker plate:	(2) 3/8" screws
magnet:	(2) 5/8" screws


Cut the sill height adapter to fit between door casing.

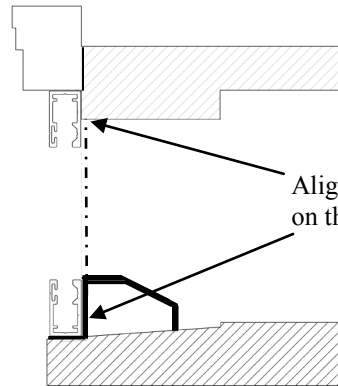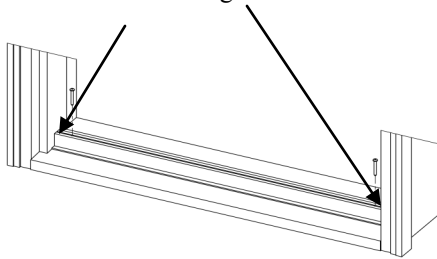

Align the sill adapter to sit flush on the mounting surface plane.

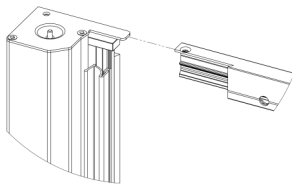

Install and secure tracks.

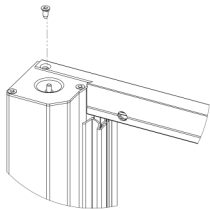

view from interior of house

Transfer hole locations for handle and magnet using 7/64" drill through first wall of material only.

