





# Installation instructions


Outswing Door  
inside mount  
Figure C

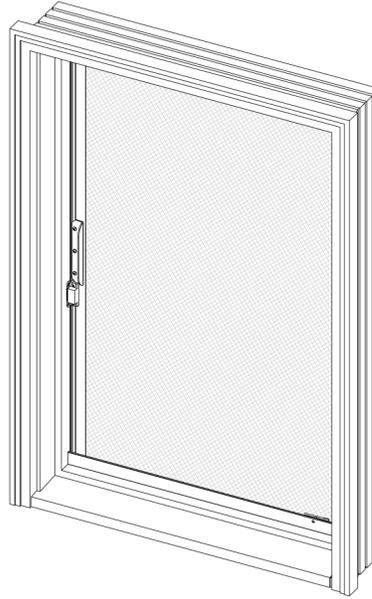

Hardware	
track mount:	(3) 5/8" screws
2 tracks:	(5) 5/8" screws
handle:	(3) 3/8" screws
striker plate:	(2) 5/8" screws
magnet :	(2) 3/8" screws

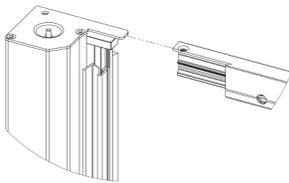


Install and secure tracks.

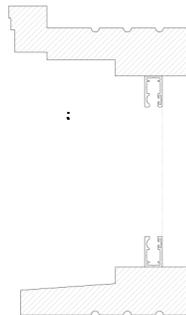


Track positioning


Recommended attachment Sequence.

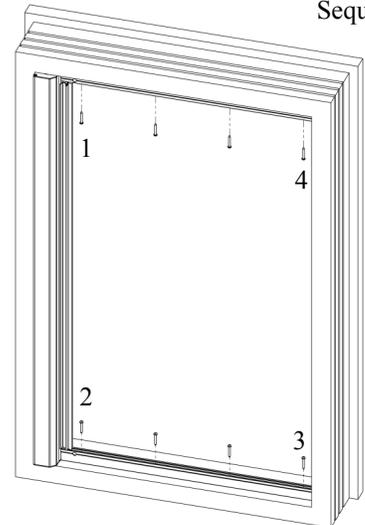

Transfer hole locations for handle and magnet, and use 7/64" drill through first wall of handle bar only.

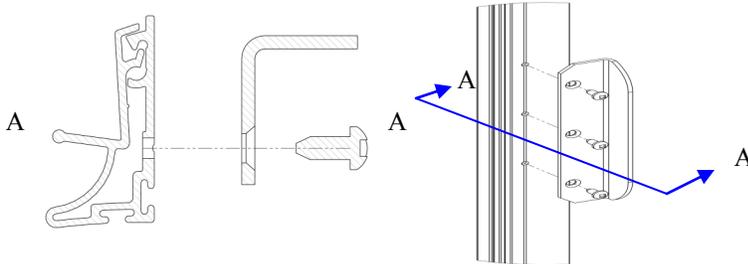

Top view of handle

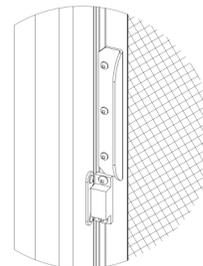

Magnet position