



Installation instructions


Inswing Door
inside mount
Figure D

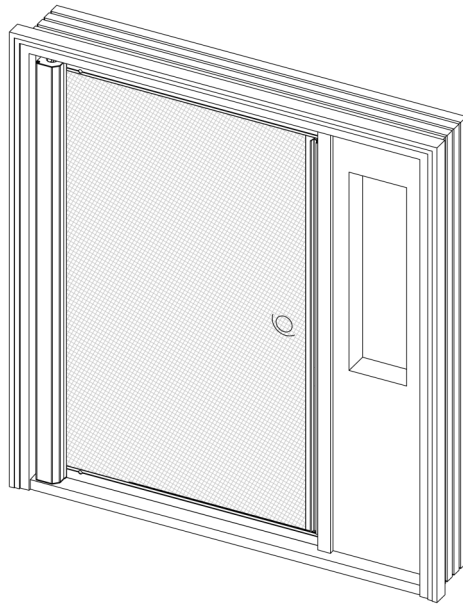



Cut the sill adapter to fit between door casing

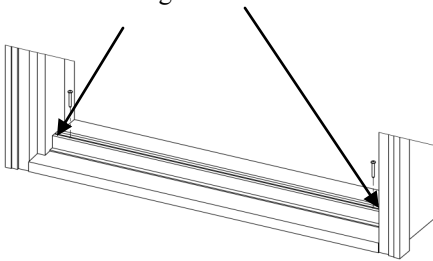

- Hardware:**
- sill adapter => (4) 1" s/s screws
 - 2 tracks => (4) 5/8" screws
 - (2) 1" screws
 - Handle => (3) 3/8" screws
 - striker plate => (2) 3/8" screws
 - Magnet => (2) 3/4" white screws

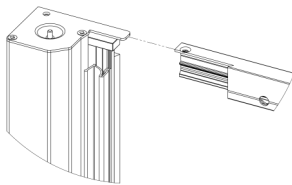

Install and secure tracks.

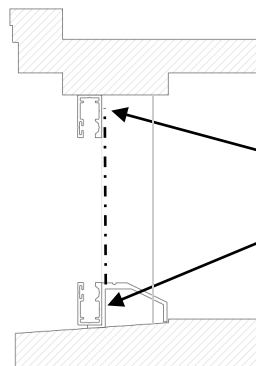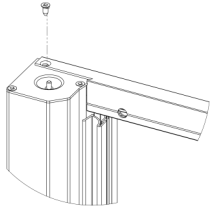

Align the sill adapter to sit flush on the mounting surface plane. In this case, the latch post.

Transfer hole locations for handle and striker plate, and use 7/64" drill through first wall of material only.

